



PREMIUM AFTERMARKET WIND DEFLECTORS



INSTALLATION INSTRUCTIONS

Ferrari Portofino Wind Deflector 2018-present

What's in the box

1 x wind deflector

1 x installation manual

Product No: 11.03.01.01






STEP 1



Place the wind deflector in the car and slide the rear pins of the wind deflector into the opening of the rear seatbelt covers.



STEP 3

Unlock the side pins of the wind deflector and click the wind deflector in the factory fitted wind deflector mounts.

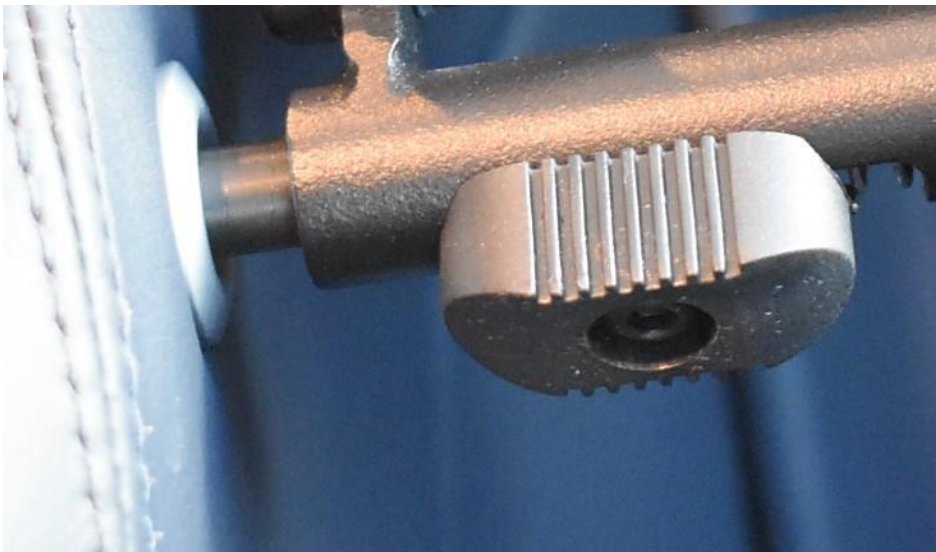

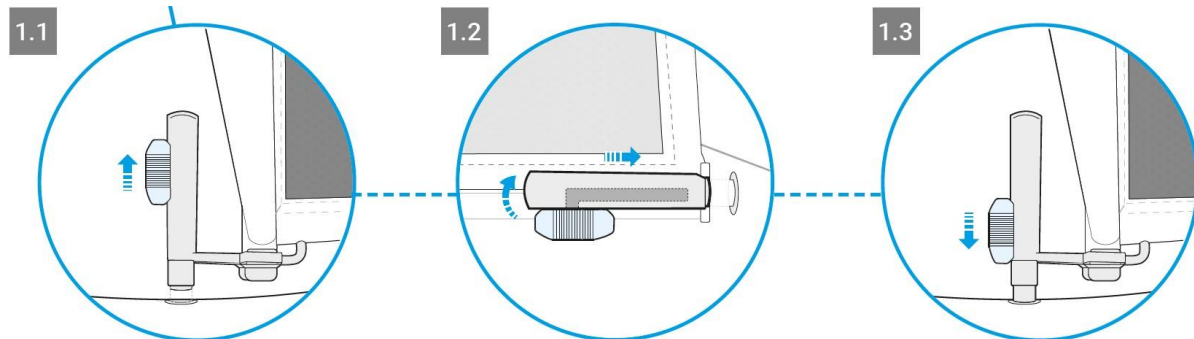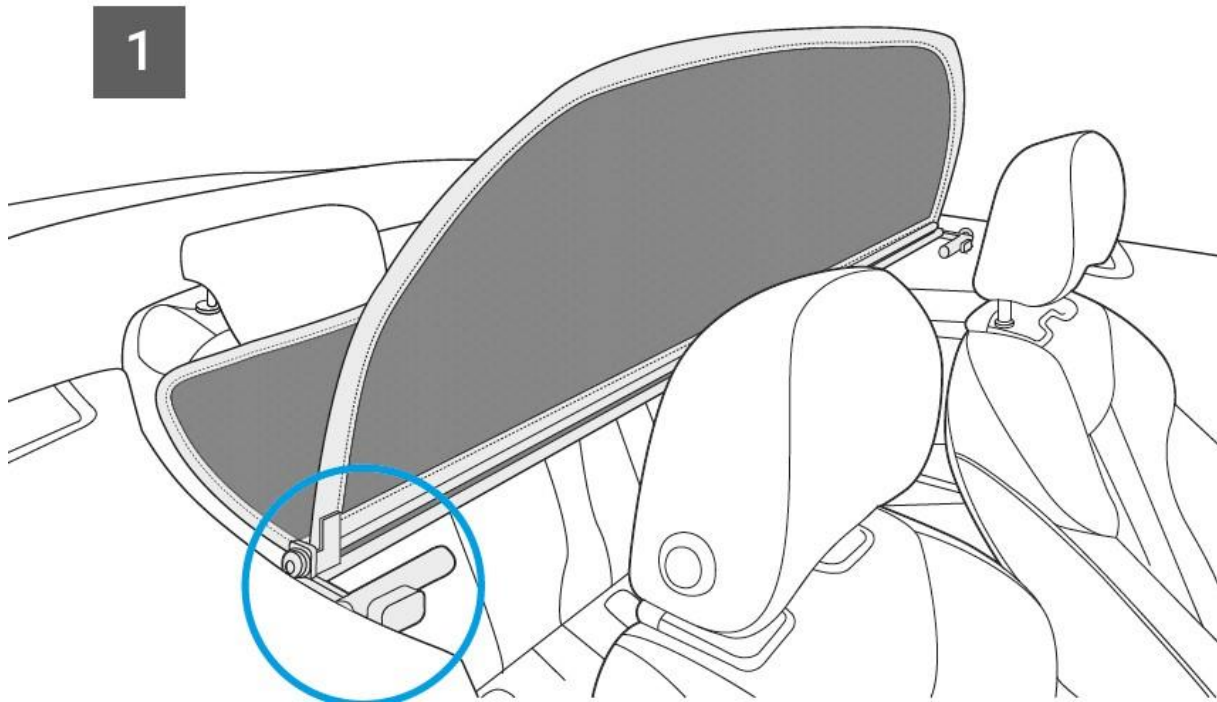

STEP 4

Go out for a drive and enjoy your APERTA wind deflector!

