



PREMIUM AFTERMARKET WIND DEFLECTORS

Ford Mustang 3 convertible wind deflector fitting instructions

Product No: 16.05.01.01



What is in the box

- 1 x Wind deflector
- 6 x Brackets
- 4 x Nuts
- 2 x Rotation knobs
- 8 x Washers
- 4 x Plastic caps
- 1 x Installation manual



PREMIUM AFTERMARKET WIND DEFLECTORS

STEP 1

Open the top and fold the front seats forward. Remove top of the side panel.





STEP 2


Loosen the bolt that is under the side panel cover and attach the bracket.





STEP 3

Attach the short and the curved bracket to the wind deflector using the supplied bolts and washers. Please note the correct sequence of the washers.

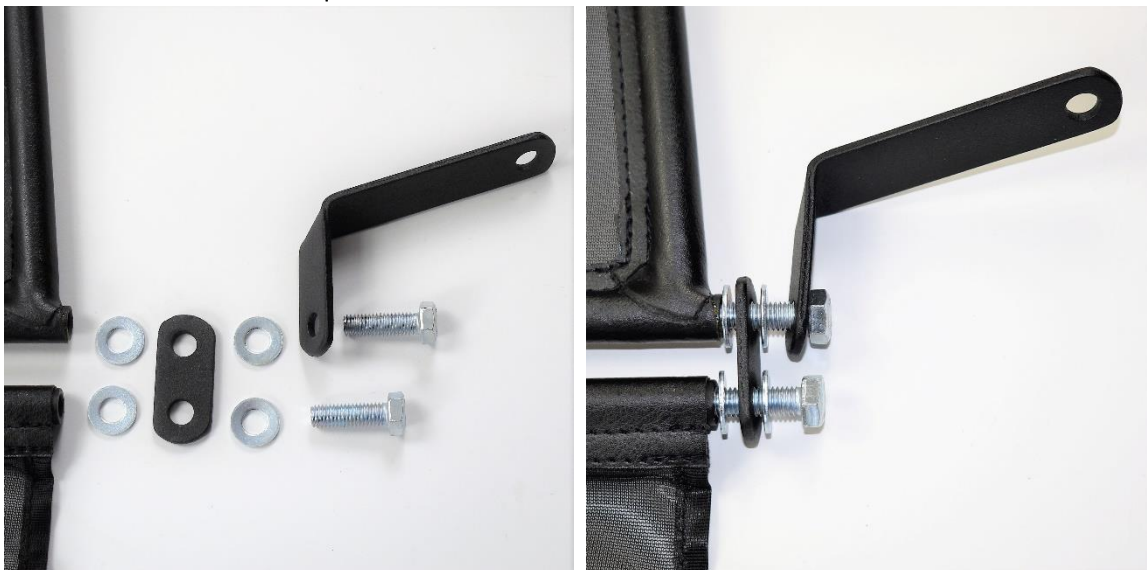



STEP 4

Attach the wind deflector to the bracket that was installed in the car using the supplied rotation knobs.

