



PREMIUM AFTERMARKET WIND DEFLECTORS

Renault Megane 1995-2003 wind deflector fitting instructions

Product No: 30.10.01.01B



What is in the box

1 x Wind deflector

1 x Installation manual

STEP 1

Open the top, fold both front seats forward then slide the wind deflector bracket in the rear seatbelt openings.







PREMIUM AFTERMARKET WIND DEFLECTORS

STEP 2

Unlock the wind deflector pins and push them the factory fitted wind deflector slots.

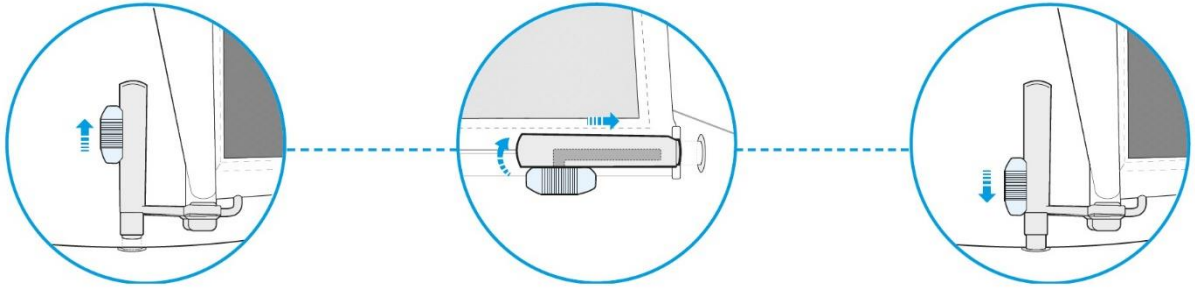

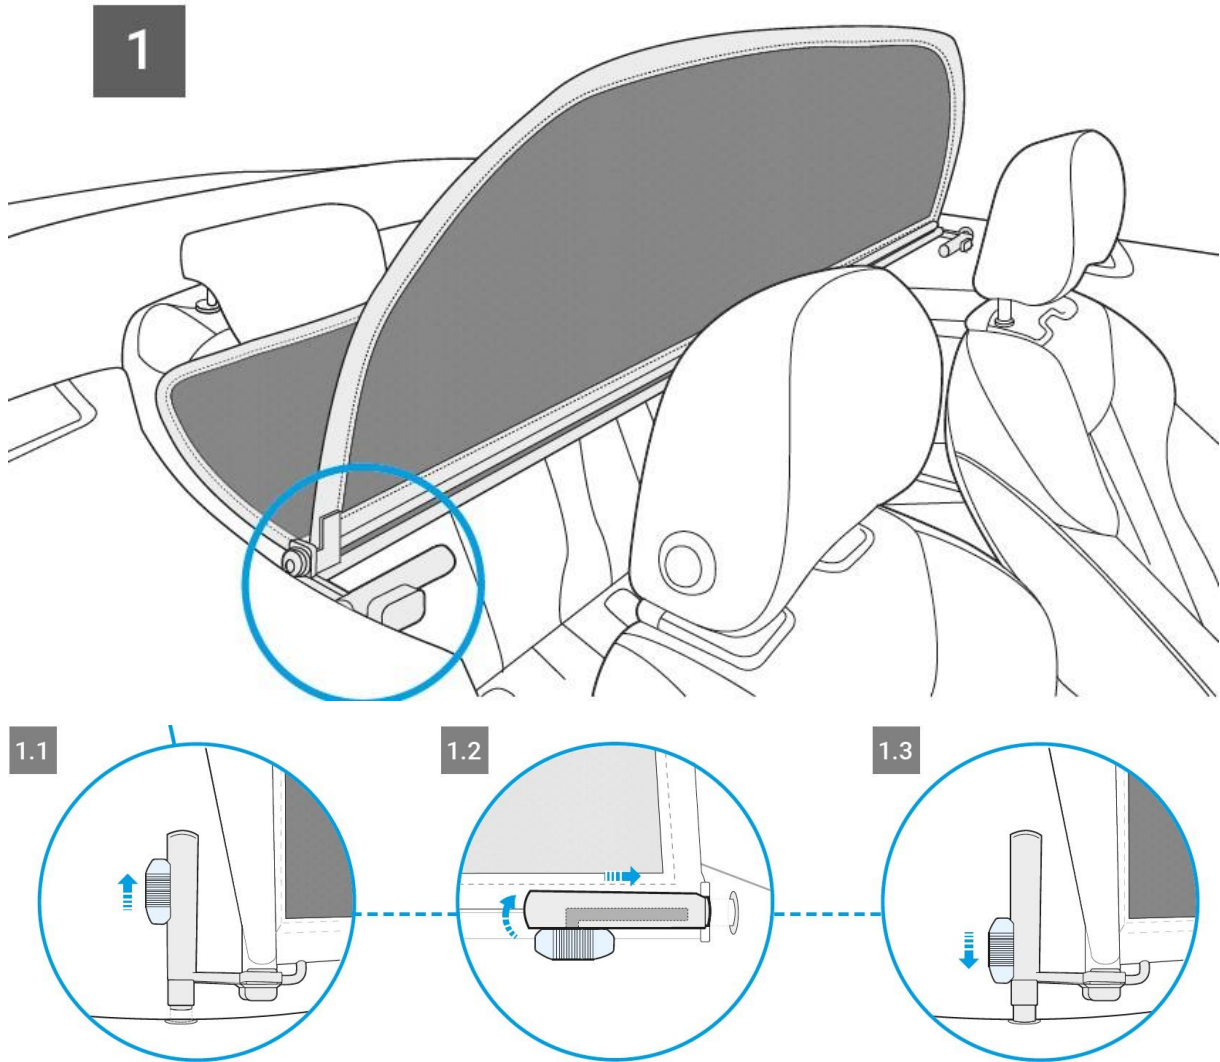

STEP 3

Go out for a test drive and enjoy you APERTA wind deflector!

