



PREMIUM AFTERMARKET WIND DEFLECTORS

Toyota T18 & T20 1989-1999 wind deflector fitting instructions

What's in the box

- 1 x wind deflector
- 4 x bolts
- 8 x washers
- 4 x plastic caps
- 2 x short brackets
- 2 x long brackets
- 2 x curved brackets
- 2 x rotation knobs
- 1 x installation manual

Product No: 36.19.01.01 – 36.24.01.01






PREMIUM AFTERMARKET WIND DEFLECTORS

STEP 1

Attach the short and the curved bracket to the wind deflector using the supplied bolts and washers. Please note the correct sequence of the washers.

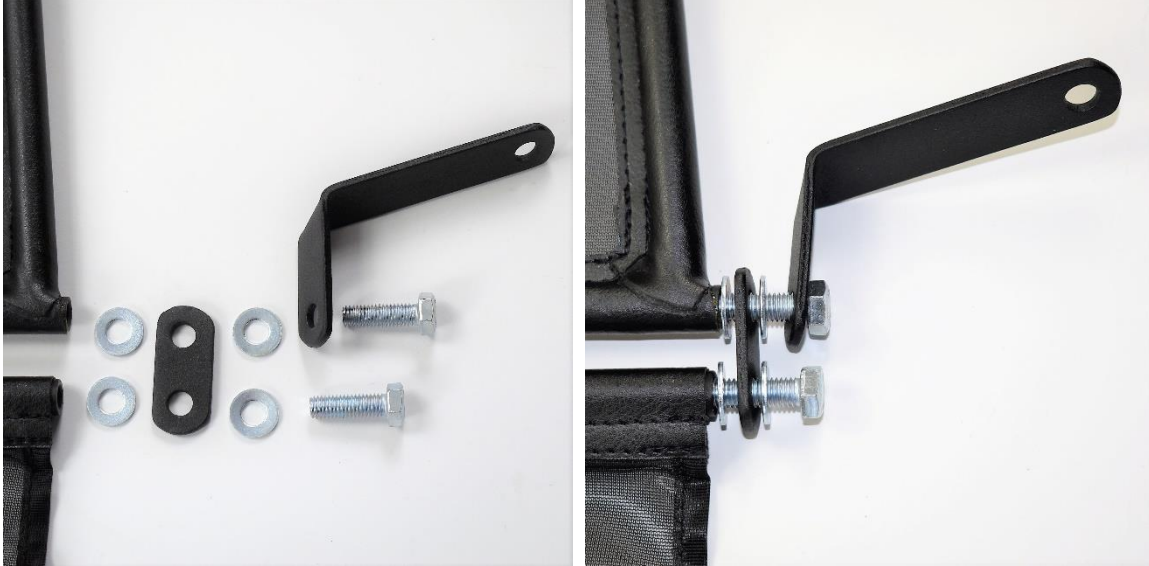

STEP 2

Place the plastic caps over the bolts.





PREMIUM AFTERMARKET WIND DEFLECTORS

STEP 3

Fold the front seats forward.



STEP 4

Bolt the bracket with the nut to the side panel of your car on position show on the picture. There is no screw or bolt supplied to attach the bracket to the side panel. The reason for this is that people have different preferences to attach the bracket. Some use self-tapping screws others bolt and nuts.





PREMIUM AFTERMARKET WIND DEFLECTORS

STEP 5

Attach the wind deflector to the brackets using the rotation knobs.



STEP 6

Attach the Velcro strap to your carpet.





PREMIUM AFTERMARKET WIND DEFLECTORS

STEP 7

Go out for a drive and enjoy your APERTA wind deflector!

