



PREMIUM AFTERMARKET WIND DEFLECTORS

Porsche 944 & 968 Wind Deflector 1989-1995

Product No.: 29.07.01.01

**What's in the box**

- 1 x wind deflector
- 1 x installation manual
- 2 x wind deflector plugs
- 1 x bracket



INSTALLATION INSTRUCTIONS





### STEP 1

Open the top and fold the seats forward. Take out the plastic caps on both side of the car.





**STEP 2**

Drill a hole in the center of both plastic caps.



**STEP 3**

Fit the supplied plugs to the plastic caps.








### STEP 4


Place the caps back into the car.

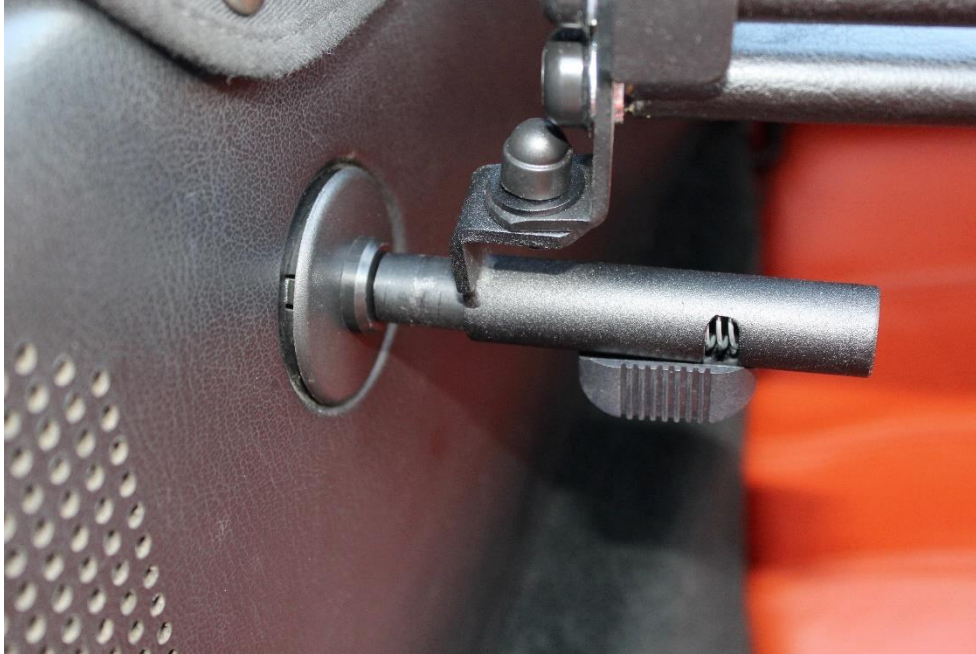

### STEP 5

Fold both rear seats forward and attach the supplied brackets to the rear of the seat using two self-tapping screws (not supplied). To determine exact position for click the wind deflector into the car and make sure the wind deflector is horizontal.



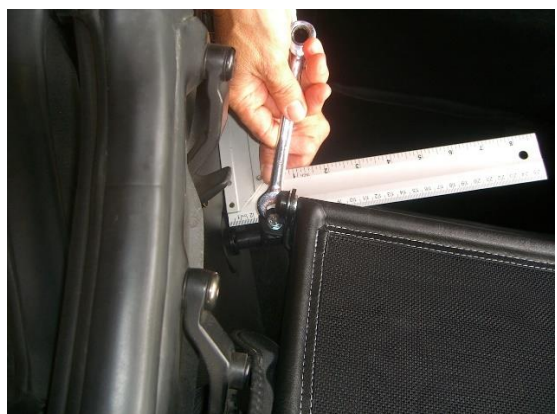



**STEP 5**

Click the wind deflector into all brackets and go out for a test drive and enjoy your wind deflector!

